


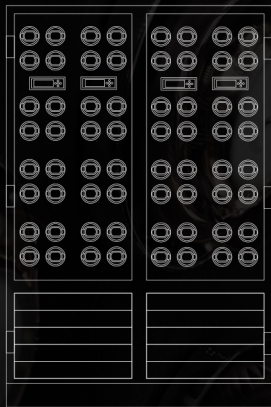

ENIGWATCH

# WATCH WINDER CABINET



WELCOME GUIDE

# NEW USER TO REGISTER

## SCANLOGIC BASIC

Code Name	ScanLogic	Functions
Change code	000000	<ul style="list-style-type: none"><li>Allow changing of any code</li><li>0, 0, 0, 0, 0, 0 cannot be changed</li></ul>
Manager Code	123456	<ul style="list-style-type: none"><li>Allow manager to open safe</li><li>Opens programming (multiple functions)</li></ul>
Reset Code	999999	<ul style="list-style-type: none"><li>Resets all codes to factory default</li><li>Does not open safe</li></ul>

### A. Open lock

1. Enter default Manager code 123456

### B. Change Code

1. Enter 000000
2. Enter existing code, 1 beep
3. Enter new 6 digit code, 1 beep
4. Repeat new 6 digit code, 2 beeps

\*Manager code of 123456 must be changed before any other Users can be added; Manager code cannot be changed back to 123456

\*\*Reset Code must be changed from default

\*\*\*1 long beep means code is not allowed

### C. Add Manager fingerprint (s)

1. Open with Manager code/fingerprint
2. Hold "+," and hold until 2 beeps
3. Place fingerprint 4X, 1 beep each
4. 2 beeps confirms fingerprint addition

\*Manager can add up to 5 fingerprints

---

#### **D. Add User1 Code**

1. Open with Manager code/fingerprint
2. Hold "1," 1 beep
3. Enter new 6 digit code, 1 beep
4. Repeat new 6 digit code, 2 beeps

---

#### **E. Add User2 Code**

1. Open with User1 code/fingerprint
2. Hold "1," 1 beep
3. Enter new 6 digit code, 1 beep
4. Repeat new 6 digit code, 2 beeps

---

#### **F. Add fingerprints**

5. Open with own code/fingerprint
6. Hold "+," 1 beep
7. Place fingerprint 4X, 1 beep each
8. 2 beeps confirms fingerprint addition

\*User1 and User2 can add up to 5 fingerprints

---

#### **G. Delete own fingerprints (All)**

1. Open with your own code/fingerprint
2. Hold "-", 2 beeps

\*All of your fingerprints have been deleted

---

#### **H. Delete User2 (Code & fingerprints)**

1. Open with User1 code/fingerprint
2. Hold "3", 2 beeps

\*User2 code and fingerprints are deleted

---

### **I. Delete All** (Codes/fingerprints)

1. Open with manager code/fingerprint
2. Hold "3", 2 beeps

\*Manager code remains unchanged, User1 and User2 are deleted

---

### **J. Reset** (resets codes to factory default)

1. Input reset code, default is 999999
2. Hold "6", 2 beeps

\*Lock is in default mode, Manager code reverts to 123456, Reset code remains unchanged

---

### **K. Turn beeper off**

1. Open with Manager or User1 code/fingerprint
2. Hold "4," 1 beep

---

### **L. Turn beeper on**

1. Open with Manager or User1 code/fingerprint
2. Hold "4," 2 beeps

### **Security Levels:**

Security Level 1 = Fingerprint or code

Security Level 2 = Fingerprint **and** code

---

### **M. Change to Security Level 2 (fingerprint **and** code)**

1. Open with Manager or User code/fingerprint
  2. Hold "5," 1 beep, then 2 beeps
- 

### **N. Change to Security Level 1 (fingerprint **or** code)**

1. Open with Manager or User1 code and fingerprint
  2. Hold "5," 1 beep, then 1 beep
- 

### **Penalty Time**

1. The entry of 5 incorrect codes will cause the lock to enter Penalty Time where the lock is lock down for a period of 5 minutes. You cannot open the lock during the penalty time period.
2. During the Penalty Time, the keypad will beep every 5 seconds and the buttons on the keypad are not operable. Entering additional codes during penalty time does not extend penalty time.
3. Two beeps indicates penalty time has expired and the beeping will stop, enter a valid code to open the safe lock.
4. Note: If after penalty expires you enter an invalid code two more times, the lock will go back into penalty time.

### **Troubleshooting**

1. Lock beeps 10 times after fingerprint/code entry: This is the low battery indicator. Replace the battery with a new Duracell or Energizer battery.
2. Green lights after input of fingerprint or code – this is an indication of a valid fingerprint or code entry
3. Red lights after input of fingerprint or code – this is an indication of an invalid fingerprint or code entry

---

## SCANLOGIC D66

### About Security Level Classifications

- Level 1: EntryPad can be operated by a code only.
- Level 2: EntryPad must be operated by a fingerprint and the code associated with that enrolled fingerprint (“bound code”).
- Level 3: EntryPad can be operated by a fingerprint or a code.

All enrolled users will be deleted when security level is changed.  
The first code (ID No. 01) will be set to default 123456.  
Factory default security level is Level 3.

### Battery Replacement Instructions

1. On the back of EntryPad, you will see one 9V alkaline battery. Take the battery out of the battery compartment.
2. Gently remove the connector by unsnapping it from the two terminals on the top of the battery. Never Pull on the Battery Leads.
3. Connect a new 9V alkaline battery to the battery clip.
4. Put the battery and the leads completely back into the battery compartment.

For mounting and wiring information refer to the installation instructions.

---

### 1. Enrolling the first fingerprint (Security Level 3)

1. Install a brand new 9V alkaline battery in the ScanLogic D66 EntryPad.
2. Place your finger on the fingerprint scanner, the LCD screen will show “Welcome” and then “Set Time/Date”. Set the correct time and date using the UP and Down arrows keys and OK button. Once set the LCD screen will show “**Start Enrolling First User**”.

- After the screen shows **"Place Finger"**, place your finger on the fingerprint scanner and hold.



- Hold your finger on the scanner until the above displays finish one by one. Upon completion, the first fingerprint with an ID No. 01 is enrolled successfully.

---

## 2. Unlocking the ScanLogic D66 (Security Level 3)

- Place enrolled fingerprint on the scanner.
- After enrolled fingerprint is verified successfully, the safe lock will unlock.

---

## 3. Enroll the second fingerprint (Level 3)

- Press **"Menu/OK"**. The screen will show **"Select Menu"**.
- Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
- Place the enrolled finger of ID01 on the scanner and hold.
- After ID01 fingerprint is verified successfully, press **"▲"** or **"▼"** to select **"Enroll New User"**.



- Press **"Menu/OK"** again.



- Place the second enrollee's finger (different from the first one) on the fingerprint scanner and hold.



The second fingerprint, with an ID No. 02, is enrolled successfully.  
Note: ID No. 01 and ID No. 02 are administrators.

---

#### 4. Enroll additional fingerprints (Security Level 3)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, the LCD screen shows: **"Select Menu"**, press **"▲"** or **"▼"** to select **"Enroll New User"**.
5. Follow the Steps 5 and 6 in Section 2.0 to enroll additional fingerprints.

---

#### 5. Set/Change User Code (Level 3)

The ScanLogic D66 is capable of registering not only fingerprints but also 6 digit codes for each enrolled fingerprint. To Set or Change a User code, perform the following process:

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**, press **"Menu/OK"** again.
3. Place the user's finger on the fingerprint scanner and hold.
4. After the fingerprint is verified, press **"▲"** or **"▼"** to select **"Set/Change User Code"**, press **"Menu/OK"**
5. When the screen displays **"New Code"**, enter a 6 digit code.



6. Enter the same 6 digit code again.



The new code is now set or changed successfully.

#### Note:

- Administrators' code can be set or changed directly.
- Non-administrators' code must be enabled by the administrator first, then, the user can set or change their code.
- If consecutive four digits of a new code (for example 512341) is the same as one of the enrolled codes (612345), LCD screen will show: **"Code is similar"** and the code will not be accepted. Enter a different code for this User.

## 6. Enable User Code (Security Level 3)

1. Press "**Menu/OK**". The screen will show "**Select Menu**".
2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press "**▲**" or "**▼**" to select "**Enable User Code**", press "**Menu/Ok**".
5. The screen will display "**ID:03 Code Enable?**", press "**▲**" or "**▼**" to select the desired ID No. to be enabled.



6. When the desired ID No. is visible on the screen, press "Menu/Ok" to select. This User ID will now have the ability to have a code in addition to an enrolled fingerprint.



Important: The User must now set his own code using his enrolled fingerprint.

7. Press "**Menu/Ok**", press "**▲**" or "**▼**" to select "**System Menu**". with the User's fingerprint (in this example using the fingerprint of ID No.3).
8. Press "**▲**" or "**▼**" to select "**Set/Change User Code**".
9. Enter a unique 6 digit code.



10. Enter the same 6 digit code.



When the LCD screen displays: "**ID:03 Code Saved**", the code of ID:03 has been set successfully .

Note:

If consecutive four digits of a new code (for example 512341) is the same as one of the enrolled codes (612345), LCD screen will show: **"Code is similar"** and the code will not be accepted. Enter a different code for this User.

---

## 7. Disable User Code (Security Level 3)

If a User has previously had a code enabled for use, this function will Disable the code.

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press **"▲"** or **"▼"** to select **"Disable User Code"**, press **"Menu/Ok"**.
5. Press **"▲"** or **"▼"** to select the desired user ID to be disabled.
6. Press **"Menu/Ok"**

ID No.3's code disabled.

Note:

This function only disables the user's code, not the user. The user can still unlock the door by fingerprint.

---

## 8. Disable User (Security Level 3)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press **"▲"** or **"▼"** to select **"Disable User"**.
5. Press **"▲"** or **"▼"** to select the desired ID No. to disable (e.g. ID 03).



6. Step 6: Press **"Menu/OK"**.

The LCD screen displays: **"ID:03 Disabled"**, confirming that ID 03 has been successfully disabled. This User's fingerprint and code have now been disabled. If the User attempts to access the lock, the screen will display **"ID:03 Disabled"**.

Note:  
Administrators cannot be disabled.

### 9. Enable User (Security Level 3)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press **"▲"** or **"▼"** to select **"Enable User"**.



5. Press **"Menu/OK"**.
6. Press **"▲"** or **"▼"** to select the ID No. to be enabled (e.g. ID 03).



7. Press **"Menu/OK"**.



The User ID No. 03 is now enabled and can use the previously registered fingerprint and/or code to access the lock.

### 10. Set Time Delay (Security Level 3)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.

- Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
- After the administrator is verified successfully, press "▲" or "▼" to select "**Set/Cancel Time Delay**".



- Press "**Menu/OK**".



- Press "▲" or "▼" to set time delay (00 to 99 min). Press "**Menu/OK**".



- Now set the Time Window. Press "▲" or "▼" to select the desired Time Window interval (01 to 15 min).
- Press "**Menu/OK**".

The Time Delay has now been set successfully. See Section 12.0 for Time Delay opening operation.

**Note:**

- Time Delay Override: ID No.1 is a Time Delay Override Code and can unlock the lock at any time, bypassing Time Delay.
- Additionally, a second User ID (ID01 – ID30) can be set to as a Time Delay Override Code.
- During Time Delay period, the EntryPad can be programmed but the Lock Body cannot be unlocked.
- After the original time delay has been changed successfully, the new time delay settings will take place after the next unlocking sequence.
- However, if the new Time Delay value is longer than the previous one, the new time delay value will be effective during the next unlocking.

---

## 11. Set Time Delay Override User

- Press "**Menu/OK**". The screen will show "**Select Menu**".
- Press "▲" or "▼" to select "**System Menu**". Press "**Menu/OK**" again.

3. Enter the code of ID No. 00 (Super Code).
4. When the LCD screen shows "**Select Menu**", press "**Menu/OK**".
5. Press "**▲**" or "**▼**" to select "**Set TDO User ID**".



6. Press "**Menu/OK**".
7. Press "**▲**" or "**▼**" to select the User ID No.



Note:

- If ID21 is selected, for example, the two users with TDO are: ID01 and ID21.
- Even if ID21 is set with TDO, it will not be an administrator with more functions. ID01 and ID02 are still administrators but ID02 will no longer have TDO capability.
- If you select ID01, then ID01 will be the only user with TDO.
- ID01 has TDO capability by default. However, in order to remove TDO capability from ID01, select ID00 in the above programming sequence. This will remove TDO capability from ID01 and only ID00 will have TDO capability.

## 12. Duress Time Delay (Level 3)

1. Press "**Menu/OK**". The screen will show "**Select Menu**".
2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, the LCD shows "**Select Menu**", press "**▲**" or "**▼**" to select "**Set Duress Time Delay**".
5. Press "**Menu/OK**". Press "**▲**" or "**▼**" to set the time between 0~99 minutes, press "**Menu/OK**".
6. Set the "TM window": Press "**▲**" or "**▼**" to set the time between 01~15 minutes, press "**Menu/OK**".

Note:

- ITDO capability is still available to TDO Users.
- Duress code can only be set by User ID00. (The menu selection to program Duress is "Duress Code Shift").

### 13. Time Delay: Unlock with an enrolled fingerprint or code (Level 3)

To unlock the safe lock when Time Delay has been programmed:

**For example:**

Time Delay is set 10 minutes and Time Window 5 minutes.

1. Place an enrolled fingerprint (ID: 03) on the fingerprint scanner and hold until the LCD show:



2. The display will start counting up. The LCD screen flashes the expired time interval every 15 seconds.
3. When Time Delay finishes counting, two beeps will sound and the LCD screen will show:



4. The display will start counting down. The LCD screen flashes with remaining time every 15 seconds.

Within the next 5 minutes, a User must verify an enrolled fingerprint to unlock. The LCD will display the ID of the verified user.



Note:

- As a default TDO User, ID 01 can unlock without time delay.
- When the EntryPad starts its Time Delay process, user can operate the EntryPad normally, but the Lock Body will not be unlocked even if the verification is successful.
- If no valid code or enrolled fingerprint are verified successfully during Time Window period, the Lock Body will be locked until the end, and then the LCD will show:



---

#### 14. Set number of locks (Security Level 3)

The ScanLogic D66 is capable of managing up to 4 Lock Bodies using a junction box (Junction box Part# CB11-IT4). The EntryPad must be programmed to recognize the additional Lock Bodies.

1. Press "**Menu/OK**". The screen will show "**Select Menu**".
2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press "**▲**" or "**▼**" to select "Set Number of Locks". Press "**Menu/OK**".



5. The display will prompt you to enter the "**Mfc. Code**". The default Mfc. Code is 975246.



6. Press "**▲**" or "**▼**" to set number of locks.



Note:

The default number of locks is 01. The maximum number of locks is 04.

When opening the lock, the display will ask you to select the lock to be opened, press the numbered button that corresponds with the lock to be opened. Then, the lock will be unlocked automatically if verification is successful.

---

#### 15. Authorize access to locks (Level 3)

The ScanLogic D66 allows you to set the Users that will have access to specific locks.

1. Press "**Menu/OK**". The screen will show "**Select Menu**".
2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.

4. After the fingerprint is verified successfully, press “▲” or “▼” to select “**Authorize Locks**”.



5. Press “**Menu/OK**”. The system will now ask which range of Users are to be programmed to open this set of locks.



6. Press “▲” or “▼” to set the first ID in the group of users to be authorized. Press “**Menu/OK**”.



7. Press “▲” or “▼” to set the last ID in the group of users to be authorized. Press “**Menu/OK**”. The example shows how to authorize users with ID No. from 03 to 05.



Lock 1234” means the number for each lock. “Auth. oxxx” shows whether the group has authorization for each specified lock. Letter “o” means the group has authorization to open this lock. Letter “x” means the group does not have authorization.

For example: To authorize users with ID No. 03, 04 and 05 to open Lock 2, when the LCD screen shows:



Press “1” to change “o” to “x”.

Press “2” to change “x” to “o”. Press “Menu/OK”.



Now, the authorization is completed.

Note:

Administrators can open all locks without authorization.

---

## 16. Enable sequence (Security Level 3)

The ScanLogic D66 allows you to set up sequencing when multiple locks are present. This means that you can program the system such that Lock #1 is known to be the Outer (or Main) door on the safe. With Sequencing enabled, if a User is authorized to open Lock#2, the system would know to first open Lock#1 and then 5 seconds later it will automatically open Lock #2.

(This eliminates the need to Open Lock#1, and then enter your code again to open Lock#2).

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, the LCD screen shows **"Select Menu"**. Press **"▲"** or **"▼"** to select **"Enable Sequence"**. Press **"Menu/OK"**.

If the number of Locks is more than one, when unlocking in sequence is enabled:

Press "1", Lock 1 will be unlocked;

If you press a number which is >1 (for example 3), Lock 1 will open first and then Lock 3 will open 5 seconds later.

---

## 17. Delete One User (Security Level 3)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press **"▲"** or **"▼"** to select **"Delete One User"**. Press **"Menu/OK"**.
5. The system will automatically select the first enrolled User. Press **"▲"** or **"▼"** to select the User ID to be deleted. Press **"Menu/OK"** to confirm.



6. The system will confirm the user has been deleted as follows:



Note : If User ID 01 is Set to Master, User ID 02 cannot delete User ID 01.

---

### 18. Delete All Users (Security Level 3)

1. Press "**Menu/OK**". The screen will show "**Select Menu**".
2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press "**▲**" or "**▼**" to select "**Delete All Users**". Press "**Menu/OK**". The following message will be displayed:



5. Press "**Menu/OK**" to confirm...

The system starts deleting users from ID No. 01 to ID No. 30; and then confirms the deletion as below:



**Note1:** After deleting all users, all the enrolled fingerprints and codes are deleted completely.

**Note2:** If User ID 01 is Set to Master, User ID 02 cannot delete all users.

---

### 19. Dual Mode (Security Level 3)

1. Press "**Menu/OK**". The screen will show "**Select Menu**".
2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press "**▲**" or "**▼**" to select "**Enable Dual Mode**". Press "**Menu/OK**".
5. The LCD will display the following message confirming that Dual Mode is now enabled:



Note :

- Dual Mode Override: In dual mode, administrator's fingerprints or codes (ID No. 01 or 02) are Dual Mode Override Codes and can unlock the Lock Body without the need for a second code to be entered.
- Only administrators' fingerprints or codes can be used to change Dual Mode to single user mode.
- In order to open the lock in Dual Mode, the second code or fingerprint must be entered within 60 seconds after the first code is successfully verified.
- If all users are deleted, Dual Mode will be disabled automatically.

---

## 20. Set TimeLock (Security Level 3)

The ScanLogic D66 has TimeLock functionality. With TimeLock, you can set a timetable during which users can open the safe lock system. Outside of this timetable, no users can enter their code to open the safe lock system.

ID00 is a TimeLock Override User. All other users ID01-ID30 must abide by the TimeLock schedule. ID00, 01, 02, 03 and 04 have access to the TimeLock functions within their respective System Menu selections.

---

## 21. Set Timer

The menu selection allows you to set a time /date to lock down the safe lock system.

1. Press "**Menu/OK**". The screen will show "**Select Menu**".
2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
3. Place an enrolled administrator's finger (ID No. 01 to 02) or ID No. 03-04 on the scanner and hold.
4. After the fingerprint is verified successfully, press "**▲**" or "**▼**" to select "**Set Timer**". Press "**Menu/OK**".



5. While "Y" is flashing, press "**▲**" or "**▼**" to select "Y" (yes) or "N" (No) and press "**Menu/OK**".

- In selecting “Y” you are requesting that the system follow the time schedule you are about to program.
  - If selected “N”, this means you are requesting the system to ignore the time schedule that follows. Thereby deactivating the time schedule and allowing Users to open the safe without restriction.
6. Press “▲” or “▼” to select Month, Day, Year and Time before which users cannot unlock the controller. Shift to the next time element (Month, Day, Year, Time) by pressing “**Menu/OK**”. The example below will restrict Users from being able to open the safe lock until after 9:00 on July 4, 2010.



## 22. Set Time Table

1. Press “**Menu/OK**”. The screen will show “**Select Menu**”.
2. Press “▲” or “▼” to select “**System Menu**”. Press “**Menu/OK**” again.
3. Place an enrolled administrator’s finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press “▲” or “▼” to select “**Set Time Table**”. Press “**Menu/OK**”.



5. Two (2) separate Time Tables can be set. Press “▲” or “▼” to select Time Table number (01 or 02) and “Y” (yes) or “N” (No) and press “**Menu/OK**”.
  - If “Y” is selected, the Time Table (in this example: Time Table 01) is enabled – meaning this time table will be followed and the lock will only be able to be unlocked during the scheduled times.
  - If “N” is selected, the Time Table is disabled.



6. Now set the opening schedule for each day of the week by pressing “▲” or “▼” to select the week day, “Y” (or “N”) to enable the schedule for this day and the time period (starting time and ending time). Press “**Menu/OK**” to confirm.

- If “Y” is selected, users can only unlock the controller during the pre-set time period.
- If “N” is selected, users cannot unlock on the specified weekday.

Note:

If “Y” is selected and the starting time and ending time are the same, the safe lock can be unlocked at any time all day.

---

### 23. Set Holidays

1. Press “**Menu/OK**”. The screen will show “**Select Menu**”.
2. Press “▲” or “▼” to select “**System Menu**”. Press “**Menu/OK**” again.
3. Place an enrolled administrator’s finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press “▲” or “▼” to select “**Set Holidays**”. Press “**Menu/OK**”.



5. Ten (10) Holiday Tables can be preset. Press “▲” or “▼” to select Holiday Table number (01 through 10) and press “**Menu/OK**”.



6. Press “▲” or “▼” to select “Y” (or “N”) to enable this Holiday schedule.
7. Now set the Holiday date range and press “Menu/OK” to confirm.ending time). Press “**Menu/OK**” to confirm.
  - If “Y” is selected, users cannot unlock the controller during the specified holidays.
  - If “N” is selected, users can unlock during the holidays.

Note:

Holidays must be set each year.

---

### 24. Set Timer (Security Level 3)

1. Press “**Menu/OK**”. The screen will show “**Select Menu**”.
2. Press “▲” or “▼” to select “System Menu”. Press “**Menu/OK**” again.
3. Place an enrolled administrator’s finger (ID No. 01 or 02) on the scanner and hold.

4. After the fingerprint is verified successfully, press “ ” or “ ” to select “See Timer”. Press “**Menu/OK**”.

The LCD screen will show the next date and time that this safe lock can be opened:

The example below indicates that this safe is TimeLocked until July 4th, 2010.



---

## 25. Penalty Time – Wrong Code Entry (Security Level 3)

Penalty time is a function that prevents someone from opening your safe lock by trying to guess codes.

Four (4) consecutive invalid code entries initiate a 4-minute penalty time period with the LCD showing:



The EntryPad is shut down and no operation is permitted.

Then, the EntryPad will start counting down with the LCD flashing the remaining time every 15 seconds. e.g.



After the countdown is finished, the EntryPad is ready to use again.

Note:

Two more consecutive invalid codes will restart an additional 4 minutes delay period. An attempt to unlock by an enrolled fingerprint will not terminate the penalty time period.

---

## 26. Wireless Communication

The ScanLogic D66 has a built-in wireless transmitter/receiver. Using the wireless feature, you can wirelessly upload the audit trail to a PC operating SECURAM's Wireless Station Management (WSM) software. In order to operate this function, the EntryPad must be set to communicate with the PC. Complete the following procedures to establish communication.

Note:

With the ScanLogic D66, the wireless feature allows for LIVE Audit Streaming where all activities at the safe lock are instantly reported to the software across the network.

---

## 27. Set Device ID Number

The Device ID must be set in the EntryPad and in the WSM software so that communication can be established. The Device ID is similar to an "IP address" on other PC compatible devices or equipment.

1. Press "**Menu/OK**". The screen will show "**Select Menu**".
  2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
  3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
  4. After the fingerprint is verified successfully, press "**▲**" or "**▼**" to select "**Device ID**", press "**Menu/OK**".
  5. Using the numbers on the EntryPad, enter the number for the Device – must be 4 digits.
- 

## 28. Set Host ID

1. Press "**Menu/OK**". The screen will show "**Select Menu**".
  2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
  3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
  4. After the fingerprint is verified successfully, press "**▲**" or "**▼**" to select "**Set Host ID**".
  5. Using the numbers on the EntryPad, enter the number of the Host ID – this must match the Host ID of the PC to which it will connect.
- 

## 29. Wireless Connection

1. Press "**Menu/OK**". The screen will show "**Select Menu**".
2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press "**▲**" or "**▼**" to select "**Wireless Connection**", press "**Menu/OK**".

The EntryPad will now download its Audit Trail to the wireless device within range.

### 30. Day Light Saving (Security Level 3)

1. Press **"Menu/OK"**, the screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press **"▲"** or **"▼"** to select **"Day Light Saving TM"**. Press **"Menu/OK"** again.



5. Press **"▲"** or **"▼"** to select **"Y"** or **"N"**. If selecting **"Y"**, this function will be enabled. If selecting **"N"**, this function will be disabled.
6. Then, press **"▲"** or **"▼"** to select the **"Start Month"**



7. Select the **"Start Week"**



8. Select the **"Start Time"**



9. Select the **"End Month"**



10. Select the **"End Week"**



11. Select the **"End Time"**



For example: If you live in North America, you can select

- "Start Month": 03
- "Start Week": 02
- "Start Time": 02
- "End Month": 11
- "End Week": 01
- "End Time": 02

This function will start at 2:00am on second Sunday of March and end at 2:00 on first Sunday of November.

Note:

Users can set "Day Light Saving" according to their certain condition.

---

### 31. Maximum Door Open Time (Security Level 3)

1. Press "**Menu/OK**", the screen will show "**Select Menu**".
2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press "**▲**" or "**▼**" to select "**Max. Door Open Time**". Press "**Menu/OK**" again.



5. Press "**▲**" or "**▼**" to select the maximum allowable time that the door can be left open.
    - If you select Max. Door Open Time as 2 minutes, that means if the lock is opened more than 2 minutes the Screen will alert you that the lock is still opened, and the screen will illuminate every 15 seconds continuing to alert you that the door is still open.
- 

### 32. Show Audit Trail (Security Level 3)

1. Press "**Menu/OK**", the screen will show "**Select Menu**".
2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press "**▲**" or "**▼**" to select "**Show Audit Trail**". Press "**Menu/OK**".



5. The screen will show the last record of operation on the EntryPad.
  6. Press “▲” or “▼” to view more records.
- 

### 33. Set ID01 to Master (Security Level 3)

This programming command is used in order to establish a hierarchy within the Manager (ID01)/Supervisor (ID02) code permissions. This programming feature can only be accessed through the System Menu, when logging in with the Super Code ID00.

- When ID01 is Set to Master, User ID02 cannot Delete or Disable ID01.
  - When ID01 is Set to Master, User ID 02 cannot “Delete All Users”.
  - When ID01 is Set to Master, User ID 02 cannot “Set DayLight Savings Time”
  - When ID01 is Set to Master, User ID 02 cannot “Set Duress Time Delay”
  - When ID01 is Set to Master, User ID 02 cannot “Set Device ID Number”
  - When ID01 is Set to Master, User ID 02 cannot Change “Security Levels”
  - When ID01 is Set to Master, User ID 02 cannot “Enable Dual Mode”
1. Press “**Menu/OK**”, the screen will show “**Select Menu**”.
  2. Press “▲” or “▼” to select “**System Menu**”. Press “**Menu/OK**” again.
  3. Place an enrolled administrator’s finger (ID No. 01 or 02) on the scanner and hold.
  4. After the fingerprint is verified successfully, press “▲” or “▼” to select “**Set ID01 to Master**”. Press “**Menu/OK**”.

“**ID01 Set to Master**” can be reversed to its default setting by selecting the menu selection “**Set ID01 to Manager**”

---

### 34. System Info. (Security Level 3)

1. Press “**Menu/OK**”. The screen will show “**Select Menu**”.
2. Press “ ” or “ ” to select “**System INFO**”.
3. Press “**Menu/OK**” and the LCD will show information about this safe lock system as follows:
  - The first line of the display will show the EntryPad Part Number: 0601A-D66 indicating this EntryPad is a ScanLogic D66

- Capacity: 30 Users
- Used: 00 User
- V9.91120511-27
- ID Dev 0017/ Host 1
- Audit: 0200
- Total Number of Users
- Total Number of Users enrolled in the system
- Firmware version
- Device ID and Host ID
- Audit trail records capacity

### 35. Set Security Level

1. Press **"Menu/OK"**, the screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
3. Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
4. After the fingerprint is verified successfully, press **"▲"** or **"▼"** to select the desired Security Level.
  - **Level 1:** EntryPad can be operated by a code only.
  - **Level 2:** EntryPad must be operated by a fingerprint and the code associated with that enrolled fingerprint ("bound code").
  - **Level 3:** EntryPad can be operated by a fingerprint or a code.



5. Press **"Menu/OK"**.



6. Press **"Menu/OK"** to confirm.



Follow the same steps to set to Level 1.

#### Note:

After Security Level is changed, the number of locks will not be changed.

When security level is changed, all fingerprints and codes will be deleted. The first code (ID01) will be set to default 123456.

---

### 36. Enroll the first fingerprint and its bound code (Security Level 2)

1. With the ScanLogic D66 set to Security Level 2, place your finger on the fingerprint scanner and hold.



The first fingerprint with an ID01 is enrolled.

2. The display will prompt you to enter a code (6 digits).



3. Enter the same code again.



When the screen shows "ID 01 Code Saved", the first fingerprint and its bound code with ID01 is enrolled successfully.

Note:

The default password (123456) will be deleted automatically after the first fingerprint and code are enrolled successfully.

---

### 37. Enroll the second or additional fingerprints and its bound code (Level 2)

1. Press "**Menu/OK**". The screen will show "**Select Menu**".
2. Press "**▲**" or "**▼**" to select "**System Menu**". Press "**Menu/OK**" again.
3. Place the first enrolled finger on the scanner and hold. You will be prompted to enter your Code.

After the fingerprint and its bound code are verified successfully, press "**▲**" or "**▼**" to select "**Enroll New User**".

Follow the same steps as to enroll the first administrator's fingerprint and code to complete the enrollment.

---

### 38. Set/Change the first code (Security Level 1 – Code Only)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
3. Enter default code 123456.
4. When the LCD screen shows **"Select Menu"**, Press **"▲"** or **"▼"** to select **"Set/Change User Code"**, press **"Menu/OK"**.
5. Enter a new 6 digit code and repeat.

Note:

Follow the same steps to change any valid code.

---

### 39. Enroll the second or additional codes (Level 1 – Code Only)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
  2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
  3. Enter the first enrolled code (ID01).
  4. After the code is verified successfully, press **"▲"** or **"▼"** to select **"Enroll New User"**,
  5. Press **"▲"** or **"▼"** to select ID No. , and set new codes following the prompts .
- 

### 40. Disable / Enable User (Level 1 & 2)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
  2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
  3. Place the administrator's finger on the scanner and/or enter an administrator's code.
  4. After the fingerprint or code is verified successfully, follow the steps in Section 5.0 and 6.0 to disable or enable a user.
- 

### 41. Set Time Delay (Level 1 & 2)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
3. Place an administrator's finger on the scanner and/or enter an administrator's code.
4. After the fingerprint or code is verified successfully, follow the steps Section 9.0 to set time delay.

---

#### **42. Unlock with an enrolled code (Level 1 & 2)**

1. Place an enrolled finger on the scanner and/or enter an enrolled code.
- 

#### **43. Set number of locks (Level 1 & 2)**

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
  2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
  3. Place the administrator's finger on the scanner and/or enter an administrator's code.
  4. After the fingerprint or code is verified successfully, press **"▲"** or **"▼"** to select **"Set number of locks"** and follow the steps in Section 10.0.
- 

#### **44. Authorize access to locks (Level 1 & 2)**

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
  2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
  3. Place the administrator's finger on the scanner and/or enter an administrator's code.
  4. After the fingerprint or code is verified successfully, press **"▲"** or **"▼"** to select **"Authorize Locks"** and follow the steps in Section 10.1.
- 

#### **45. Enable Sequence (Level 1 & 2)**

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
  2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
  3. Place the administrator's finger on the scanner and/or enter an administrator's code.
  4. After the fingerprint or code is verified successfully, press **"▲"** or **"▼"** to select **"Enable Sequence"** and follow the steps in Section 10.2.
- 

#### **46. Delete one user / all users (Level 1 & 2)**

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
3. Place the administrator's finger on the scanner and/or enter an administrator's code.

4. After the fingerprint or code is verified successfully, press “▲” or “▼” to select “Delete One User” or “Delete All Users” and follow the steps in Section 11.0 and 12.0.
- 

#### **47. Dual Mode (Level 1 & 2)**

1. Press “Menu/OK”. The screen will show “Select Menu”.
  2. Press “▲” or “▼” to select “System Menu”. Press “Menu/OK” again.
  3. Place the administrator’s finger on the scanner and/or enter an administrator’s code.
  4. After the fingerprint or code is verified successfully, press “▲” or “▼” to select “Dual Mode” and follow the steps in Section 13.0.
- 

#### **48. Set Time Table - TimeLock (Level 1 & 2)**

1. Press “Menu/OK”. The screen will show “Select Menu”.
  2. Press “▲” or “▼” to select “System Menu”. Press “Menu/OK” again.
  3. Place the administrator’s finger on the scanner and/or enter an administrator’s code.
  4. After the fingerprint or code is verified successfully, press “▲” or “▼” to select “Set Time Table” and follow the steps in Section 14.2.
- 

#### **49. Set Timer (Level 1 & 2)**

1. Press “Menu/OK”. The screen will show “Select Menu”.
  2. Press “▲” or “▼” to select “System Menu”. Press “Menu/OK” again.
  3. Place the administrator’s finger on the scanner and/or enter an administrator’s code.
  4. After the fingerprint or code is verified successfully, press “▲” or “▼” to select “Set Timer” and follow the steps in Section 14.1.
- 

#### **50. See Timer (Level 1 & 2)**

1. Press “Menu/OK”. The screen will show “Select Menu”.
2. Press “▲” or “▼” to select “System Menu”. Press “Menu/OK” again.
3. Place the administrator’s finger on the scanner and/or enter an administrator’s code.
4. After the fingerprint or code is verified successfully, press “▲” or “▼” to select “See Timer” and follow the steps in Section 14.4.

---

## 51. Set Holidays (Level 1 & 2)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
  2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
  3. Place the administrator's finger on the scanner and/or enter an administrator's code.
  4. After the fingerprint or code is verified successfully, press **"▲"** or **"▼"** to select **"See Holiday"** and follow the steps in Section 14.3.
- 

## 52. Penalty Time – Wrong Code Entry Penalty (Level 1 & 2)

See Section 15.0

---

## 53. Day light savings (Level 1 & 2)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
  2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
  3. Place the administrator's finger on the scanner and/or enter an administrator's code.
  4. After the fingerprint or code is verified successfully, press **"▲"** or **"▼"** to select **"DayLight Savings TM"** and follow the steps in Section 18.0.
- 

## 54. Max. Door Open Time (Level 1 & 2)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
  2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.
  3. Place the administrator's finger on the scanner and/or enter an administrator's code.
  4. After the fingerprint or code is verified successfully, press **"▲"** or **"▼"** to select **"Max. Door Open Time"** and follow the steps in Section 19.0.
- 

## 55. Audit Trail (Level 1 & 2)

1. Press **"Menu/OK"**. The screen will show **"Select Menu"**.
2. Press **"▲"** or **"▼"** to select **"System Menu"**. Press **"Menu/OK"** again.

3. Place the administrator's finger on the scanner and/or enter an administrator's code.
  4. After the fingerprint or code is verified successfully, press "▲" or "▼" to select "**View Audit Trail**" and follow the steps in Section 20.0.
- 

## 56. System Info (Level 1 & 2)

1. Press "**Menu/OK**". The screen will show "**Select Menu**".
  2. Press "▲" or "▼" to select "**System Info**". Press "**Menu/OK**" again.
  3. Follow the steps in Section 22.0.
- 

## 57. Recover System (Level 1 & 2 & 3)

The ScanLogic Series safe lock systems have the ability to be reset to factory default settings using a very unique secure method. Each system has a default recovery code. The Default code is 999999 - this code can be changed as necessary (refer to the Recovery Code Set selection).

Upon entry of the recovery code, the LCD screen displays an alpha-numeric code. This code cannot be used to open the safe lock system or to change the code to factory default. The alpha numeric code must be deciphered using SECURAM's Authorization Code Generator Software.

The alpha-numeric code is entered into the software together with the encryption code. Through the software, these codes are deciphered to generate a One Time Use Reset Code.

When entered into the ScanLogic safe lock, the lock and EntryPad are reset to factory default and the system is recovered. Once used, the OTC (One Time Code) is no longer valid.

There is no limit to the number of times a system can be recovered using this process.

This is a vast improvement over other commonly used reset functions, as it offers a very secure recovery method.

---

## 58. Recovery Code Set

The default Recovery Code for the ScanLogic Series is 999999. It is not necessary to change this code, but if preferred this code can be

changed with the following procedure.

1. Press the "**Menu/OK**" button.
2. Using the "**▲**" or "**▼**", scroll to the "**System Menu**" and "**Press OK**".
3. Place the administrator's finger on the scanner and/or enter an administrator's code. The "**Select Menu**" message will be displayed.
4. Scroll to the menu selection "**Recovery Code Set**" and Press OK.
5. You will be prompted to enter the existing Recovery Code; Press OK.
6. The LCD screen will display a key Code. Record this number and call an authorized SECURAM Recovery Center or SECURAM Tech Support at 1-805-988-8088 for an Authorization Code. This code remains valid for a period of 20 minutes only.
7. After receiving the One Time Use Authorization Code from the Recovery Center, press the "**back**" button; and you will be prompted to enter your Authorization Code.
8. Next you will be prompted to enter your new 6 digit Recovery Code.
9. Repeat the 6 digit Recovery Code.

The new Recovery Code has now been set. DO NOT lose this code. Without this code your system cannot be recovered.

---

## 59. Recover System

In the event that you need to recover the system during its use, the following procedure is to be followed. System Recover would be required in a number of circumstances such as:

- All Managerial User Codes have been lost or forgotten.
- The system is unresponsive to commands and may need to be reset.

1. Press the Menu/OK button.
2. Using the **▲** and **▼**, scroll to the Recover System Menu and Press OK.
3. The display will prompt you to enter the Recovery Code. Enter the existing Recovery Code. The default recovery Code is 999999.
4. The LCD screen will display an alpha-numeric number random key. Record this number and call an authorized SECURAM Recovery Center or SECURAM Tech Support at 1-805-988-8088. This code remains valid for a period of 20 minutes only.
5. After receiving the One Time Use Recovery Code from the Recovery Center, press the "**back**" button; and you will be prompted to enter your Recovery Code.

6. Your system will now be restored and will display this message:

- The Super Code will now be reset to 11111.
- The Manager Code will now be reset to 123456.
- Time Delay, if programmed previously, remains active.

Note:

After recovering your system, you can recover again with 20 minutes without having to get another OTC. After 20 minutes you would require a new OTC to recover again.

---

## 60. Disable Recover

In some jurisdictions, the Recovery feature is prohibited (Australian Government). option to disable the recovery feature, if desired.

1. Press the Menu/OK button.
2. Using the ▲ and ▼, scroll to the System Menu and Press OK.
3. Place the administrator's finger on the scanner and/or enter an administrator's code. The "**Select Menu**" message will be displayed as follows.
4. Scroll to the menu selection "**Disable Recovery**" and Press OK.

The Recovery Option will now be disabled.

---

## 61. Simple Mechanical Reset

SECURAM Safe Locks can operate in either Analog mode or Digital mode. When they are paired with the SafeLogic Series (EntryPads with no LCD screen or fingerprint reader) the safe lock operates in analog mode.

When paired with a ScanLogic Series (EntryPads with an LCD screen) or ScanLogic (EntryPads with a fingerprint reader and/or LCD screen), the safe lock operates in digital mode.

The ScanLogic D66 is a digital system and can be paired with any SECURAM safe lock body.

If the lock body that you are pairing the ScanLogic D66 with has been paired previously with an analog system, for example the SafeLogic Basic (or any other SafeLogic Series EntryPad) or was set at the factory in the default Analog mode, the following Simple Mechanical

Reset procedure must be followed.

1. Ensure that the EntryPad is not connected to the lock, and that the battery is not connected to the EntryPad.
2. Find the reset hole on the back of the lock (under the QC sticker).
3. Using a poke tool, depress the reset button on the back of the lock 3 times. This discharges any latent energy within the lock's capacitors.
4. Now the part that requires 3 hands... Depress the reset button and hold it in its depressed position. While the reset button is depressed, connect the battery to the entrypad.
5. Continue to hold the reset button in its depressed position for another 5 seconds; then release.

A communication signal has now been sent to the Lock body telling it to convert from analog to digital mode. The ScanLogic will now be able to operate the lock body.

Q: How do you know if the lock has been reset?

- The ScanLogic will not sound or beep when it resets. When a button is pressed, the LCD will report "**Link with Lock OK**". This indicates that the lock is now in digital mode and has been successfully paired and the default codes will operate the lock. If the LCD reports "**Fail to Link with Lock**", repeat the reset process.

---

## 62. Testing

The ScanLogic D66 has 2 onboard system tests:

1. Cycle Testing
2. Hardware Testing

This is a very unique feature to SECURAM safe lock systems. As the access system on a fortified steel box – the safe -- it is imperative that safe locks can provide solid performance. SECURAM offers this unique menu selection that allows you to test the lock system performance through actual Cycle Testing.

The "Hardware Testing" menu selection is not available for field use. It is however used in the manufacturing process to check the board level components.

---

### 63. Cycle Testing

In order to perform a cycle test on the ScanLogic system, follow these

1. Press the Menu/OK button.
2. Using the **←** and **→**, scroll to the System Menu and Press OK.
3. Place the administrator's finger on the scanner and/or enter an administrator's code.. The "Select Menu" message will be displayed.
4. Scroll **→** to the menu selection "Cycle testing" and Press OK.
5. The system will prompt you to enter the Manufacture Code. Enter 975246.

The system will now cycle the motor drive system, locking and unlocking the lock body and checking the Fingerprint module every 1.5 seconds. The cycle testing will continue until the battery depletes itself of energy or power is removed.

---

### 64. Hardware Testing

The "Hardware Testing" menu selection is not available for field use. However, it is used in the manufacturing process to check the board level components.

---

### 65. Menus

There are two menus on the ScanLogic D66, the root menu and a sub-menu.

The sub-menu is accessible by entering a valid code. The menu selections in the sub-menu change depending upon the level of the code entered. Administrative Users (ID01 and 02) have access to the all programming menus. User Codes have limited menu selections.

#### ScanLogic D66 Menu

##### Root Menu

- Select Menu
- System Menu
- System Info
- Show Clock Time

 

## Root Menu

- Select Menu
- Change Code
- Show Audit Trail
- Wireless Connection
- System Info.
- Show Clock Time
- DayLight Savings Time
- See Timer
- Set Timer
- Set Time Table
- Set Holidays
- Max. Door Open Time
- Set TDO User ID
- Set Duress Time Delay
- Set/Cancel Time Delay
- Set ID01 to Master
- Delete All Users
- Enable Sequence
- Authorize Locks
- Set Number of Locks
- Recovery Code Set
- Recover System
- Encryption Key Set
- Renew Code Period
- Set Device ID Number
- Set Host ID Number
- Restore Data
- Backup Data
- Disable Recover
- Cycle Testing
- Duress Code Shift
- Enable Online Mode
- Dual Mode Group ID
- Hardware Testing
- Enable Dual Mode
- Disable User
- Enable User
- Delete One User
- Enroll New User


## Caution:

- **For indoor use only.**
- **Use one 9V alkaline battery.** Always use an alkaline battery for high quality performance. Duracell or Energizer alkaline batteries recommended.
- **LOW BATTERY ALERT:** The display will alert low battery when battery voltage reaches  $5.4\pm 0.2V$  **PLEASE REPLACE THE BATTERY IMMEDIATELY.**
- When the display alerts **low battery**, ScanLogic D66 can only be operated to lock or unlock. Operations, such as enrolling, deleting or time-delay setting, are not permitted.

# OPERATING INSTRUCTIONS

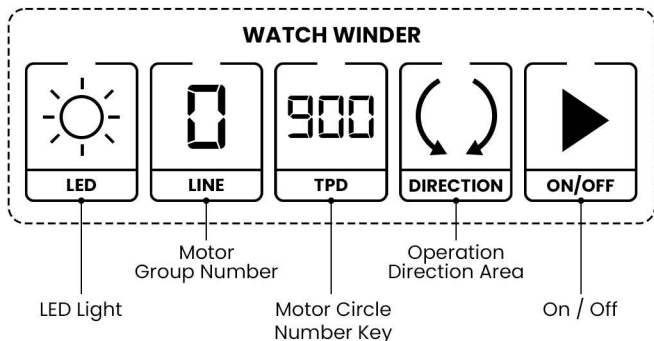

LED OFF

 

LED ON

## LED MODE LIGHT SWITCH DISPLAY

The LED light bar can be turned On and OFF at the same time by using both the ON / OFF button on the display screen and the external switch. When the light is high, the LED light is OFF, and when the light is low, the LED light is ON.



### **RUNNING DIRECTION KEY**

In the standby state, press the ON / OFF key to start and pause the operation (Note, every time you press the pause or stop button, the epitope needs to return to the origin to stop rotating).



### **MOTOR GROUP NUMBER**

The displayed number represents the control position. When the number of motor group is 0, it means controlling all motor groups at the same time.






### **MOTOR CIRCLE NUMBER KEY**

TPD (Turns Per Day) represents the total turns of the watch in 24 hours. There are 5 sets of TPDs available in total. (650/900/1350/1800/2000 respectively).



### **OPERATION DIRECTION KEY**

Motor rotation direction display:  is clock wise rotation mode,  is the counterclock wise rotation mode,  is the bidirectional rotation mode. In the standby state, press this key to set the working direction mode; in the running state, press the DIRECTION key to change the working direction mode, you need to press the start button again to restart the new mode.

---



✉ [support@enigwatch.com](mailto:support@enigwatch.com)

☎ +1 (833) 600-0077  
Mon-Fri 9:00-5:00 PST

#### **CONTACT US**

We are just as dedicated to providing you with Superior Customer Service. Please send us an email. We value your input, and we welcome your question, comments and feedback.

Question? Please email us at [support@enigwatch.com](mailto:support@enigwatch.com)